



4 PROGRAM SELECT OPTION

The PROGRAM SELECT switch is used to select one of 4 discrete programs for the 4 output channels. When the PROGRAM SELECT switch is moved to a different position, control is transferred to that Program at the next minute transition. The switch is also used to select which Program is being entered in the Program Mode.

PROGRAMMING

Programming is as explained in the users manual with one additional step. In addition to selecting the correct Channel, Day, and Time to be entered, the user must select the correct Program to be entered using the PROGRAM SELECT switch. The PROGRAM SELECT switch may be changed at any time in the process before the ENTER button is pushed.

PROGRAM REVIEW

Program Review is as explained in the users manual with the exception of having to select the correct Program. The PROGRAM SELECT switch may be changed at any time and the unit will search for the first time for that Program, Day, and Channel. Cancelling a time is done in the same manner as explained in the users manual after the correct Program is selected.

BULK MEMORY ERASE

The Bulk Memory Erase is done one Program at a time. The Program to be erased is selected, the Erase Mode is selected and then the ENTER button is pushed. The Bulk Memory Erase for Program A will erase the Duration Periods and the Holiday Schedule. Erasing Program B, C, or D has no effect on the Duration Periods or the Holiday Schedule.

NOTE: The output channel Duration and Holiday Schedule may be programmed at any PROGRAM SELECT position and is valid for all Programs.