



## INSTALLATION INSTRUCTIONS MTC-200, 400, 600 RELAY KIT

1. Disconnect the AC power before installing this Relay Kit
2. Install the Relay & Bracket Assembly as shown.
3. Connect the relay wiring as necessary for the desired control functions. The relay wires are marked as shown on the schematic to identify relay terminals.
4. If only one relay is ordered, the lower relay and wire numbers 21 thru 28 will not be supplied.

### PARTS LIST

ITEM	QTY
Relay & Bracket Assembly *	1
Screw #8-32 x 3/8	2
Lock Washer #8	2
Flat Washer #8	2

\* May be one or 2 relays depending on order

### RELAY SPECIFICATIONS

Coil Voltage	120 VAC $\pm$ 10%
Coil Power	1.4 VA Nom.
Contact Rating (UL)	Resistive Load 10 Amp @ 240 VAC or 30 VDC

