



** Jumper TXEN and +5 to enable Transmit Out RS485
Remove Jumper to enable Receive In RS485

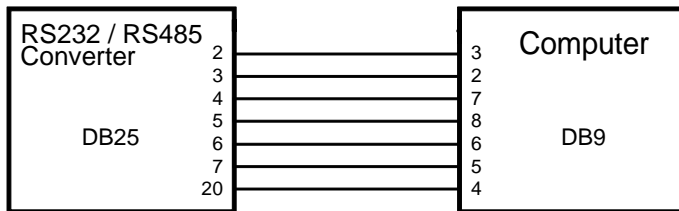

Pins 2, 3, & 7
are Required

Pins 2, 3, & 5
are Required

 MIDWEST TIME CONTROL, INC.		
Title: RS232/RS485 Converter		
Drawing Number: 980014-01		REV
SCALE /	DO NOT SCALE PRINT	SHEET OF