




Installation Instructions MTC-200, 400, 600 Semi-Flush Mounting Kit

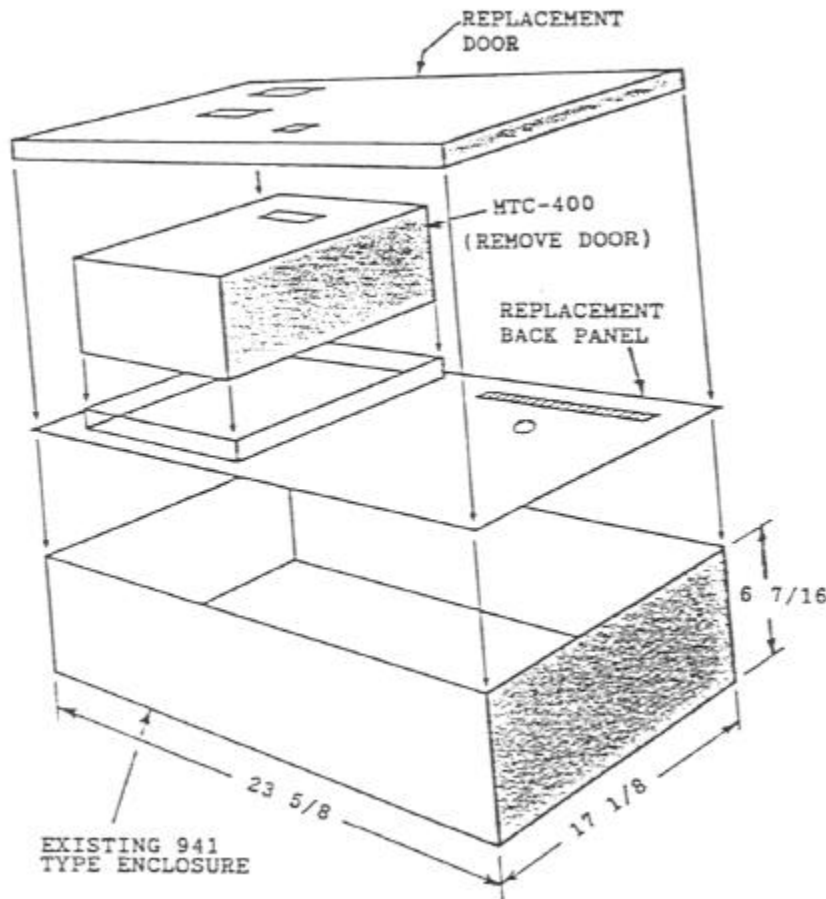

PARTS LIST

ITEM	QTY
Back Panel	1
Door	1
Grommet 7/8	3
Screw #8-32 x 1/2	3
Lock Washer #8	3
Flat Washer #8	3

1. Disconnect electrical power to the 941 Master Clock. (Note: Multiple disconnects may be required to remove power from all circuits of the clock)
2. Remove the door to the 941 Enclosure.
3. Disconnect and mark all wiring to the 941 clock.
4. Remove the 941 clock, including the back panel, from the enclosure.
5. Mount the Replacement Back Panel in the 941 enclosure using the hardware removed in step 4.
6. Remove the Door the MTC-x00 Master Clock.
7. Mount the MTC-x00 Master Clock on the left side of the Replacement Back Panel using the #8 screws and washers supplied. Remove the knockouts from the bottom of the MTC-x00 enclosure as necessary for wire entrance. Use the supplied Grommets where the knockouts are removed.
8. Connect the wiring, disconnected in step 3, to the terminal strip on the Replacement Back Panel. (Note: The terminals are not marked as each installation will vary.) If preferred, and the wires have sufficient length, the wiring may be connected directly to the terminals of the MTC-x00 bypassing the terminal strip on the back panel.
9. Complete the wiring to the MTC-x00 terminals.
10. Attach the Replacement Door to the 941 enclosure.
11. Refer to the MTC-x00 Users Manual for further instructions.